



ROYAL
c a t e r i n g

USER MANUAL

DEEP FAT CHIP FRYER

- **RCEF 16DH-I-UK**
- **RCEF 10EH-I-UK**





The operation manual must be reviewed.



Never dispose of electrical equipment together with household waste.



This machine conforms to the CE declarations.



For indoor use only.



Attention! Hot surface may cause burns.



Class I protection.



PLEASE NOTE! Drawings in this manual are for illustration purposes only and in some details it may differ from the actual machine.

The original operation manual is in German. Other language versions are translations from German.

USER MANUAL

SAFETY INSTRUCTIONS

General safety information for the use of electrical devices. To avoid injury from fire or electric shock, please ensure the compliance with the safety instructions when using this device. Please read the instructions carefully and make sure that you have understood them well. Keep the manual near the equipment to be able to read it at any time. Always use current sources which are connected to the ground and which provide the necessary voltage (this info is indicated on the label on the device). If you have any doubts, let an electrician check that your outlet is properly grounded. Never use a damaged power cable. Do not open the unit in damp or wet environment, or if your hands or body are damped or wet. Protect the unit from solar radiation. Use the device in a protected location to avoid damaging the equipment or endangering others. Make sure the device is able to cool and avoid placing it too close to other devices that produce heat. Before cleaning the device, disconnect it from the power source. Use a soft damp cloth for cleaning. Avoid using detergents and make sure that no liquid enters the unit. No internal element of this device needs to be maintained by the user. Opening the device without our approval leads to a loss of warranty!

SAFETY GUIDELINES

- Please read and understand these instructions carefully before operating the device! Please observe the safety guidelines carefully in order to prevent damages through improper use!
- Please keep this manual available for future reference. If this device is passed on to third parties, the manual must be passed on with it.
- Only use this device indoors and for its intended use.
- We do not offer any warranty for damages resulting from improper use or incorrect operation.
- Before the first use, check whether the main voltage type and current comply with the indicated data on the type plate.
- This device is not intended to be used by persons (including children) with limited physical, sensory or mental aptitude, as well as lack of experience and/or knowledge, unless they are supervised by a person responsible for their safety or if they have received instructions as to how the device is used.
- ELECTRIC SHOCK HAZARD!** Do not attempt to repair the unit yourself. In case of device failures, repairs must be done by qualified experts.

- Please check the main plug and the power cable regularly. If the power cable for this device is damaged, it has to be replaced by the manufacturer or its customer service or another qualified person in order to prevent hazards.
- Prevent damages to the power cable by avoiding squeezing or bending it or rubbing it on sharp edges. Also keep the power cable away from hot surfaces and open flames.
- ATTENTION! DANGER TO LIFE!** While cleaning, never immerse the device in water or other liquids.
- Under no circumstances should the housing be opened.

TECHNICAL DATA

Product name	2x16l litre deep fat chip fryer	10l deep fat chip fryer
Model	RCEF 16DH-1-UK	RCEF 10EH-1-UK
Rated voltage [V]	230~	230~
Frequency [Hz]	50	
Rated power [kW]	2x3.2	3
Capacity [l]	2x16	10
Oil quantity max [l]	12	9
Max. temperature range [°C]	200	
Weight [kg]	24	8

SCOPE OF APPLICATION

The fryer is exclusively designed to fry food.

Do not use the fryer to:

- heat other substances or objects;
- warm up liquids containing sugar, sweeteners, acids, bases or alcohols;
- warm or warm up flammable, noxious, particularly volatile, or any other toxic substances.

The user is liable for any damage resulting from nonintended use of the device.

BEFORE THE FIRST USE

Upon receipt of the goods, check the packaging for integrity and open it. If the packaging is damaged, please contact your transport company and distributor within 3 days, and document the damages as detailed as possible. Do not turn the package upside down! When transporting the package, please ensure that it is kept horizontal and stable.

DISPOSAL OF THE PACKAGING

Please keep all packaging materials (cardboard, plastic tapes and Styrofoam), so that in case of a problem, the device can be sent back to the service centre in accurate condition!


INSTALLING THE APPLIANCE

APPLIANCE LOCATION

The temperature of the environment must not exceed 45°C and the relative humidity should not exceed 85%.

Ensure good ventilation in the room in which the device is used. The distance between the back of the chain toaster and the wall should be at least 20 cm, a minimum distance between the sides of the device and the walls should be at least 10 cm on each side and 35 cm between the top of the device and the ceiling. Keep the device away from hot surfaces. Operate the device on flat, stable, clean, refractory and dry surfaces out of the reach of children and people with mental disabilities. Install the device making sure that constant access to the main plug is ensured. The power cord connected to the appliance must be properly grounded and correspond to the technical details. Before the first use, remove all elements and clean them along with the entire device.

PRINCIPLE OF OPERATION

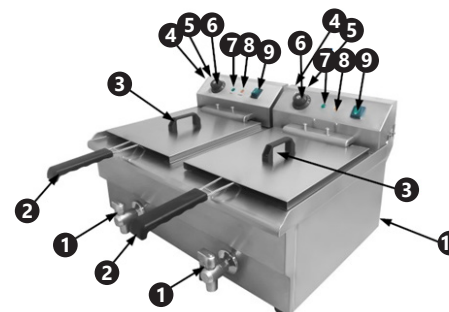

- tap with release valve
- handle with basket
- lid
- RESET button (at the back of the device)
- power cable at the back of the device)
- thermostat
- thermostat light
- power light
- ON / OFF switch
- earth (at the back of the device)

ATTENTION! The RCEF 16DH-1-UK model is shown in the photograph. The 10EH-1-UK is a single model – all buttons and functions are the same as for the RCEF 16DH-1-UK model.

- Fill the tanks with oil so that level is between the marks of minimum and maximum level.
- Set the thermostat to „0“ and insert the plug into an electricity socket.
- Use the ON/OFF switch to turn the device on (the RCEF 16DH-1 model has separate switches for each basket). The green light will come on. Then select the required temperature (in a clockwise direction); the orange light will come on and the heating element will begin heating up. Once the required temperature has been reached, the heating orange light will go off. The thermostat will maintain the required temperature by automatically switching the heating element on and off. This maintains the required temperature and saves electricity. You may begin frying.
- Use the baskets after mounting the handles. Place food in the basket and immerse it into the oil. When the food is tried, hang the basket up on the nail to let the oil drop off.

- The covers are designed to keep the content warm and t protect it from dirt. If you want to use the covers, make sure they are not wet.
- When you have finished working, tilt the heating elements 90 degrees backwards. The heating elements are vertical, and the oil can drop off.
- Use the ON / OFF switches to turn the device on.
- Our fryers are equipped with a safety button. When the heating element is tilted back, it turns automatically to prevent from accidents.
- Once the oil cools down to room temperature, discharge it using the release valve.
- Make sure the thermostat is back to „0“ (adjust the thermostat knob anticlockwise) when you have finished your work and disconnect the fryer.
- It is recommended to use only liquid oil or fat in the fryer to avoid damages of the temperature limiter. It is not recommended to put block fat in the fryer – block fat should be melted before putting it into the fryer.

ATTENTION! The device has a sensor to prevent it from overheating. If the device overheats when in use it will automatically switch off. Then wait approx. 15 minutes, unscrew the cap which protects the reset button, press RESET and screw the protective cap back on. The device may be used again.

ATTACHING THE HANDLE TO THE BASKET



TRANSPORTATION AND STORAGE

During transport, the machine should be protected from shaking, falling and turning upside down. Store it in a properly ventilated place with dry air and without any corrosive gas.

CLEANING AND MAINTENANCE

- Always unplug the device before cleaning it and after each use.
- Discharge oil and remove heating element.
- Use a damp cloth suitable for cleaning devices or use natural vinegar suitable for food grade equipment.
- Do not use water to wash the electric control panel as this might cause damage and invalidate the warranty.
- Use cleaner without corrosive substances to clean surface.
- After cleaning the device, all parts should be dried before reusing it.
- Store the unit in a dry, cool place, free from moisture and direct exposure to sunlight.

CHECK REGULARLY THE DEVICE

Regularly check the machine for signs of damage. If the machine is damaged, please stop using it immediately and contact your customer service to solve the problem.

What to do in case of a problem? Please contact your customer service and prepare the following information:

- Invoice number and serial number (the latter is to be found on the technical plate on the device).
- If relevant, take a picture of the damaged, broken or defective part.
- It will be easier for your customer service clerk to determine the source of the problem if you give a detailed and precise description of the matter. The more detailed your information, the better customer service will be able to solve your problem rapidly and efficiently!

CAUTION: Never open the device without the authorization of your customer service. This can lead to a loss of warranty!

NOTES



NOTES



NOTES

Umwelt – und Entsorgungshinweise

Hersteller an Verbraucher

Sehr geehrte Damen und Herren,

gebrauchte Elektro – und Elektronikgeräte dürfen gemäß europäischer Vorgaben **[1]** nicht zum unsortierten Siedlungsabfall gegeben werden, sondern müssen getrennt erfasst werden. Das Symbol der Abfalltonne auf Rädern weist auf die Notwendigkeit der getrennten Sammlung hin. Helfen auch Sie mit beim Umweltschutz. Sorgen Sie dafür, dieses Gerät, wenn Sie es nicht mehr weiter nutzen wollen, in die hierfür vorgesehenen Systeme der Getrenntsammlung zu geben.



In Deutschland sind Sie gesetzlich **[2]** verpflichtet, ein Altgerät einer vom unsortierten Siedlungsabfall getrennten Erfassung zuzuführen. Die öffentlich – rechtlichen Entsorgungsträger (Kommunen) haben hierzu Sammelstellen eingerichtet, an denen Altgeräte aus privaten Haushalten ihres Gebietes für Sie kostenfrei entgegengenommen werden. Möglicherweise holen die rechtlichen Entsorgungsträger die Altgeräte auch bei den privaten Haushalten ab.

Bitte informieren Sie sich über Ihren lokalen Abfallkalender oder bei Ihrer Stadt – oder Gemeindeverwaltung über die in Ihrem Gebiet zur Verfügung stehenden Möglichkeiten der Rückgabe oder Sammlung von Altgeräten.

[1] RICHTLINIE 2002/96/EG DES EUROPÄISCHEN PARLAMENTS UND DES RATES
ÜBER ELEKTRO – UND ELEKTRONIK – ALTGERÄTE

[2] Gesetz über das Inverkehrbringen, die Rücknahme und die umweltverträgliche Entsorgung
von Elektro – und Elektronikgeräten (Elektro – und Elektronikgerätegesetz – ElektroG).

Utylizacja produktu

Produkty elektryczne i elektroniczne po zakończeniu okresu eksploatacji wymagają segregacji i oddania ich do wyznaczonego punktu odbioru. Nie wolno wyrzucać produktów elektrycznych razem z odpadami gospodarstwa domowego. Zgodnie z dyrektywą WEEE 2012/19/UE obowiązującą w Unii Europejskiej, urządzenia elektryczne i elektroniczne wymagają segregacji i utylizacji w wyznaczonych miejscach. Dbając o prawidłową utylizację, przyczyniasz się do ochrony zasobów naturalnych i zmniejszasz negatywny wpływ oddziaływania na środowisko, człowieka i otoczenie. Zgodnie z krajowym prawodawstwem, nieprawidłowe usuwanie odpadów elektrycznych i elektronicznych może być karane!

For the disposal of the device please consider and act according to the national and local rules and regulations.

CONTACT

expondo Polska sp. z o.o. sp. k.

ul. Nowy Kisielin-Innowacyjna 7
66-002 Zielona Góra | Poland, EU

e-mail: info@expondo.de