

USER MANUAL

PASTRIES DEEP FAT FRYER



expondo.de





To ensure a long and failure-free operation of machines from Royal Catering, we recommend turning on the main switch only if the temperature control is set to 0. Using the main switch while the temperature control indicates any other value than 0 could limit the operating life of the main switch significantly.

TECHNICAL DATA

Parameter description	Parameter value
Product name	Pastries Deep Fat Fryer
Model	RCBG-18STHB-UK
Rated voltage [V~]/ Frequency [Hz]	230/50
Rated power [kW]	3,2
Capacity [l]	18
Maximum oil amount [l]	14
Maximum side shelf load [kg]	10
Temperature adjustment range [°C]	60÷200
Ambient temperature [°C]	-15÷40
Dimensions [mm]	485x479x307
Weight [kg]	11,5

1. GENERAL DESCRIPTION

The user manual is designed to assist in the safe and trouble-free use of the device. The product is designed and manufactured in accordance with strict technical guidelines, using state-of-the-art technologies and components. Additionally, it is produced in compliance with the most stringent quality standards.

DO NOT USE THE DEVICE UNLESS YOU HAVE THOROUGHLY READ AND UNDERSTOOD THIS USER MANUAL.

To increase the product life of the device and to ensure a trouble-free operation, use it in accordance with this user manual and regularly perform the maintenance tasks. The technical data and specifications in this user manual are up to date. The manufacturer reserves the right to make changes associated with quality improvement.

LEGEND

CE	The product satisfies the relevant safety standards.
	Read instructions before use.
X	The product must be recycled.
	WARNING! or CAUTION! or REMEMBER! Applicable to the given situation.
Â	Electric shock warning.
alltiin.	Attention! Hot surface, risk of burns.

 PLEASE NOTE! Drawings in this manual are for illustration purposes only and in some details may differ from the actual product. The original operation manual is in German. Other language versions are translations from German.

2. USAGE SAFETY

ATTENTION! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in an electric shock, fire and/ or serious injury or even death.

Whenever "device" or "product" are used in the warnings and instructions, it shall mean Pastries Deep Fat Fryer. Do not use in very humid environments or in the direct vicinity of water tanks. Prevent the device from getting wet. Risk of electric shock! When in use, do not put your hands or other items inside the device!

2.1. ELECTRICAL SAFETY

-) The plug must fit the socket. Do not modify the plug in any way. Using original plugs and matching sockets reduces the risk of electric shock.
- b) Avoid touching earthed elements such as pipes, heaters, boilers and refrigerators. There is an increased risk of electric shock if the earthed device is exposed to rain, in direct contact with a wet surface or operating in a humid environment. Water getting into the device increases the risk of damage to the device and of electric shock.
- c) Do not touch the device with wet or damp hands.
- d) Use the cable only in accordance with its designated use. Never use it to carry the device or to pull the plug out of a socket. Keep the cable away from heat sources, oil, sharp edges or moving parts. Damaged or tangled cables increase the risk of electric shock.
 e) If working with the device outside, make sure to use
 - an extension cable suitable for external use. Using an extension cable suitable for external use reduces the risk of electric shock.
- If using the device in a humid environment cannot be avoided, a residual current device (RCD) should be applied. The use of an RCD reduces the risk of electric shock

2.2. SAFETY IN THE WORKPLACE

b)

- Make sure the workplace is orderly and well lit. A messy or poorly lit workplace may lead to accidents. Try to think ahead, observe what is going on and use common sense when working with the device.
- Do not use the device in an explosion hazard zone, for example in the presence of flammable liquids, gasses or dust. The device may under some circumstances generate sparks which may ignite dust or fumes.
- Upon discovering damage or irregular operation, immediately switch the device off and report it to a supervisor without delay.
- If there are any doubts as to the correct operation of the device, contact the manufacturer's support service.
- e) Only the manufacturer's service point may repair the device. Do not attempt any repairs independently!
- f) If a fire starts, use solely powder or carbon dioxide (CO₂) fire extinguishers suitable for use on live devices to put it out.
- g) Children or unauthorised persons are forbidden from entering a work station. (A distraction may result in a loss of control over the device).
- b) Use the device in a well-ventilated space.
 - Please keep this manual available for future reference. If this device is passed on to third parties, the manual must be passed on with it.

REMEMBER! When using the device, protect children and other bystanders.

2.3. PERSONAL SAFETY

- a) Do not use the device when tired, ill or under the influence of alcohol, narcotics or medication which can significantly impair the ability to operate the device.
- b) The device is not designed to be handled by persons (including children) with limited mental and sensory functions or persons lacking relevant experience and/ or knowledge unless they are supervised by a person responsible for their safety or they have received instructions on how to operate the device.
- c) When working with the device, use common sense and stay alert. Temporary loss of concentration whilst using the device may lead to serious injuries.
- To prevent the device from accidentally switching on, make sure the switch is in the OFF position before connecting to a power source.
- e) The device is not a toy. Children should be supervised so that they will not play with the device.
- f) Note: The metal parts of the lid and the housing may be hot and may cause burns

2.4. SAFE DEVICE USE

- a) Do not use the device if the ON/OFF switch does not function properly (does not switch the device on and off). Devices which cannot be switched on and off using the ON/OFF switch are hazardous, should not be operated and must be repaired.
- b) When not in use, store in a safe place, away from children and people not familiar with the device, who have not read the user manual. The device may pose a hazard in the hands of inexperienced users.
- c) Maintain the device in a good technical state. Before each use check for general damage and especially check for cracked parts or elements and for any other conditions which may impact the safe operation of the device. If damage is discovered, hand over the device for repair before use.
- d) Keep the device out of the reach of children.
- Device repair or maintenance should be carried out by qualified persons, only using original spare parts. This will ensure safe use.
- f) To ensure the operational integrity of the device, do not remove factory-fitted guards and do not loosen any screws.
- g) It is forbidden to move, adjusting and rotating the device in the course of work.
- h) Clean the device regularly to avoid a durable encrustation of dirt.
- It is forbidden to move the appliance when it is filled with hot oil! The oil can maintain a high temperature even for 6-7h.
- j) Do not turn the device upside down, it may cause damage to it.
- bo not turn on the appliance if the container is not filled with oil.

ATTENTION! Despite the safe design of the device and its protection facilities and despite the use of additional elements protecting the operator, there is still a slight risk of an accident or injury when using the device. When using the device stay alert and use common sense.

3. USE GUIDELINES

This appliance is intended for deep frying of food. The user is liable for any damage resulting from nonintended use of the device.

3.1. DEVICE DESCRIPTION



Oil container Frying basket Shelf Lid

3

Λ

5

8

- Temperature control knob
- LED: Heat On
- LED: Power On
- "Reset" button
- 9. Drain tap

3.2. PREPARING FOR USE Appliance location

The temperature of the environment must not be higher than 40°C and the relative humidity should be less than 85%. Ensure good ventilation in the room in which the device is used. The distance between each side of the device and the wall or other objects should be at least 10 cm. Keep the device away from hot surfaces. Operate the device on flat, stable, clean, fire-proof and dry surfaces out of the reach of children and people with mental disabilities. Install the device making sure that constant access to the main plug is ensured. The power cord connected to the appliance must be properly grounded and correspond to the technical details!

Before first use, remove all components and clean them along with the entire device.

3.3. DEVICE USE

- Fill the tanks with oil so that level is between the marks of minimum and maximum level. To avoid damaging the thermostat use only oil or liquid fat. It is not recommended to fill the container with solid fats- such fats should be pre-melted.
- Set the temperature control knob (thermostat) to "0" and connect the plug to an electrical outlet. Green LED will light up.
- Set the desired temperature to which the appliance will heat the oil, the orange LED lights up. After the desired temperature is reached, the LED goes out. Now you can start frying the food. The thermostat maintains the desired temperature by automatically turning the heating element on or off.
- 4. Insert the product intended for frying into the frying basket, and then immerse the filled basket in oil.
- The lid is used to maintain the heat and prevents dirt from getting inside. Before placing the lid make sure there is no water on it.



 Always make sure that the thermostat is set to "0" after frying is finished.

- 7. IMPORTANT! The appliance has an overheat protection device. If the appliance overheats during operation, it will immediately turn off. It is then necessary to wait until the appliance cools down and reset the overheat protection. To do this, remove the button guard (unscrew and remove) and press the "RESET" button. Re-install the button guard. The appliance can be used again.
- Used oil must be cooled down to room temperature and then it can be drained using the drain tap. IMPORTANT: When the appliance is filled with oil to the maximum level, the maximum allowed side shelf load is 10 kg.
- 3.4. CLEANING AND MAINTENANCE
- a) Before each cleaning, adjustment, replacement of accessories and if the device is not used, it is necessary to disconnect the power plug and cool the device completely.
- b) Use only mild detergents suitable for washing surfaces which come into contact with food to wash the device.
- c) Do not use water to wash the electric control panel as this may cause damage and invalidate the warranty.
- d) After cleaning the device, all parts should be dried before using it again.
- e) Store the unit in a dry, cool place, free from moisture and direct exposure to sunlight.
- f) Never spray the device with water jets.
- g) Regular inspections of the device must be carried out in terms of its technical efficiency and any damages
- h) Use a soft cloth for cleaning.

NOTES

NOTES

6



Umwelt - und Entsorgungshinweise

Hersteller an Verbraucher

Sehr geehrte Damen und Herren,

gebrauchte Elektro – und Elektronikgeräte dürfen gemäß europäischer Vorgaben [1] nicht zum unsortierten Siedlungsabfall gegeben werden, sondern müssen getrennt erfasst werden. Das Symbol der Abfalltonne auf Rädern weist auf die Notwendigkeit der getrennten Sammlung hin. Helfen auch Sie mit beim Umweltschutz. Sorgen Sie dafür, dieses Gerät, wenn Sie es nicht mehr weiter nutzen wollen, in die hierfür vorgesehenen Systeme der Getrenntsammlung zu geben.



In Deutschland sind Sie gesetzlich **[2]** verpflichtet, ein Altgerät einer vom unsortierten Siedlungsabfall getrennten Erfassung zuzuführen. Die öffentlich – rechtlichen Entsorgungsträger (Kommunen) haben hierzu Sammelstellen eingerichtet, an denen Altgeräte aus privaten Haushalten ihres Gebietes für Sie kostenfrei entgegengenommen werden. Möglicherweise holen die rechtlichen Entsorgungsträger die Altgeräte auch bei den privaten Haushalten ab.

Bitte informieren Sie sich über Ihren lokalen Abfallkalender oder bei Ihrer Stadt – oder Gemeindeverwaltung über die in Ihrem Gebiet zur Verfügung stehenden Möglichkeiten der Rückgabe oder Sammlung von Altgeräten.

[1] RICHTLINIE 2002/96/EG DES EUROPÄISCHEN PARLAMENTS UND DES RATES

ÜBER ELEKTRO – UND ELEKTRONIK – ALTGERÄTE

[2] Gesetz über das Inverkehrbringen, die Rücknahme und die umweltverträgliche Entsorgung

 $von \; Elektro-und \; Elektronikger \mbox{\" attention} telektronikger \mbox{\scriptsize attention} telektronikger \mbo$

Utylizacja produktu

Produkty elektryczne i elektroniczne po zakończeniu okresu eksploatacji wymagają segregacji i oddania ich do wyznaczonego punktu odbioru. Nie wolno wyrzucać produktów elektrycznych razem z odpadami gospodarstwa domowego. Zgodnie z dyrektywą WEEE 2012/19/UE obowiązującą w Unii Europejskiej, urządzenia elektryczne i elektroniczne wymagają segregacji i utylizacji w wyznaczonych miejscach. Dbając o prawidłową utylizację, przyczyniasz się do ochrony zasobów naturalnych i zmniejszasz negatywny wpływ oddziaływania na środowisko, człowieka i otoczenie. Zgodnie z krajowym prawodawstwem, nieprawidłowe usuwanie odpadów elektrycznych i elektronicznych może być karane!

For the disposal of the device please consider and act according to the national and local rules and regulations.

CONTACT

expondo Polska sp. z o.o. sp. k.

ul. Nowy Kisielin-Innowacyjna 7 66-002 Zielona Góra | Poland, EU

e-mail: info@expondo.de

