

USER MANUAL

CREPE MAKER

- **RCEC-6000-E-UK**
- **RCEC-3000-E-UK**



This device is intended for preparation of pancakes. The surface of the plates is non-stick coated and can therefore easily be cleaned. This unit is only intended for use of this kind and not for preparation of other meals.

SAFETY GUIDELINES

1. Please read and understand these instructions carefully before operating the device! Please observe the safety guidelines carefully in order to prevent damages through improper use!
2. Please keep this manual available for future reference. If this device will be passed to third parties, the manual must be passed too.
3. Only use this device for the intended use and indoors only.
4. The crepe maker is only intended for preparing meals.
5. We do not offer any warranty for damages because of improper use or incorrect operation.
6. Check before first use, whether mains voltage type of current comply with the indicated data on the type plate.
7. This device is not intended to be used by persons (including children) with limited physical, sensory or mental aptitude or lack of experience and/or knowledge unless they are supervised by a person responsible for their safety or have received instruction from this person as to how the device is used.
8. **ELECTRICAL SHOCK HAZARD!** Do not attempt to repair the unit yourself. In case of failures of the device, repair must be made by qualified experts.
9. Please check mains plug and power cable regularly. If the power cable for this device is damaged, it has to be replaced by the manufacturer or its customer service or another qualified person, in order to prevent hazards.
10. Prevent damages of the power cable through squeezing, bending on sharp edges and keep it away from hot surfaces and open flames.
11. **ATTENTION DANGER TO LIFE!** While cleaning never immerse the device in water or other liquids.
12. Under no circumstances open the housing.

A. TECHNICAL DATA

Model	Voltage (V)	Frequency (Hz)	Power (kW)	Dimension (mm)
RCEC-6000-E-UK	230	50	2x3	860*500*220
RCEC-3000-E-UK	230	50	3	450*485*220

WARNING:

Do not use water to spray on Temperature controlling Instrument.

IMPORTANT

ALWAYS WARM UP THE DEVICE BEFORE MAKING PANCAKES!

- The device should be heated at the highest level (300 °C). The desired temperature can be set after about 15 minutes.
- After setting the desired temperature, the orange control lamp is on. This means that the device is heating up.
- When temperature reaches the setting degree, the indication light is off. When the temperature drops off, the control light will turn on and the device starts heating to the desired temperature.
- The dough should be distributed on a hot plate with a spatula
- Make sure the dough does not flow out to the sides and is evenly distributed across the hotplate.
- The cake will be always smoothly distributed if the spatula was soaked in water.
- To turn the pancake on a plate, please use the knife for pancakes (dough turncutter).

CLEANING

- Do not use corrosive cleansers and always make sure that water does not enter inside the device.
- It is forbidden to use water or water jet to directly clean the device.
- The device should be cleaned at least one time every day.
- Cut off the power supply before cleaning (pull out the plug!) and let the device to cool down before cleaning.
- Yet warm baking residues should be removed with a paper towel or a soft damp cloth
- Clean the heating plate with a dry paper towel or slightly damp cloth. Make sure that the moisture, oil or grease does not penetrate the inside of the device.
- The housing should be cleaned with a soft cloth and a mild detergent.
- The spatula and the pancakes knife should be cleaned regularly with warm water and with mild detergent.
- Never use metal or sharp objects for cleaning the device. Please note that the scratches in the coating of the heating plate have negative effect on the properties of the device.
- Always use a soft cloth for cleaning and never use any harsh cleaners that may scratch the surface.

Umwelt – und Entsorgungshinweise

Hersteller an Verbraucher

Sehr geehrte Damen und Herren,

gebrauchte Elektro – und Elektronikgeräte dürfen gemäß europäischer Vorgaben [1] nicht zum unsortierten Siedlungsabfall gegeben werden, sondern müssen getrennt erfasst werden. Das Symbol der Abfalltonne auf Rädern weist auf die Notwendigkeit der getrennten Sammlung hin. Helfen auch Sie mit beim Umweltschutz. Sorgen Sie dafür, dieses Gerät, wenn Sie es nicht mehr weiter nutzen wollen, in die hierfür vorgesehenen Systeme der Getrenntsammlung zu geben.



In Deutschland sind Sie gesetzlich [2] verpflichtet, ein Altgerät einer vom unsortierten Siedlungsabfall getrennten Erfassung zuzuführen. Die öffentlich – rechtlichen Entsorgungsträger (Kommunen) haben hierzu Sammelstellen eingerichtet, an denen Altgeräte aus privaten Haushalten ihres Gebietes für Sie kostenfrei entgegengenommen werden. Möglicherweise holen die rechtlichen Entsorgungsträger die Altgeräte auch bei den privaten Haushalten ab.

Bitte informieren Sie sich über Ihren lokalen Abfallkalender oder bei Ihrer Stadt – oder Gemeindeverwaltung über die in Ihrem Gebiet zur Verfügung stehenden Möglichkeiten der Rückgabe oder Sammlung von Altgeräten.

[1] RICHTLINIE 2002/96/EG DES EUROPÄISCHEN PARLAMENTS UND DES RATES
ÜBER ELEKTRO – UND ELEKTRONIK – ALTGERÄTE

[2] Gesetz über das Inverkehrbringen, die Rücknahme und die umweltverträgliche Entsorgung
von Elektro – und Elektronikgeräten (Elektro – und Elektronikgerätegesetz – ElektroG).

Utylizacja produktu

Produkty elektryczne i elektroniczne po zakończeniu okresu eksploatacji wymagają segregacji i oddania ich do wyznaczonego punktu odbioru. Nie wolno wyrzucać produktów elektrycznych razem z odpadami gospodarstwa domowego. Zgodnie z dyrektywą WEEE 2012/19/UE obowiązującą w Unii Europejskiej, urządzenia elektryczne i elektroniczne wymagają segregacji i utylizacji w wyznaczonych miejscach. Dbając o prawidłową utylizację, przyczyniasz się do ochrony zasobów naturalnych i zmniejszasz negatywny wpływ oddziaływania na środowisko, człowieka i otoczenie. Zgodnie z krajowym prawodawstwem, nieprawidłowe usuwanie odpadów elektrycznych i elektronicznych może być karane!

For the disposal of the device please consider and act according to the national and local rules and regulations.

CONTACT

expondo Polska sp. z o.o. sp. k.

ul. Nowy Kisielin-Innowacyjna 7
66-002 Zielona Góra | Poland, EU

e-mail: info@expondo.de