











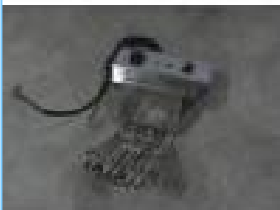 





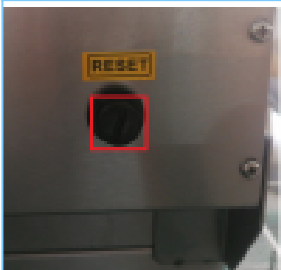 


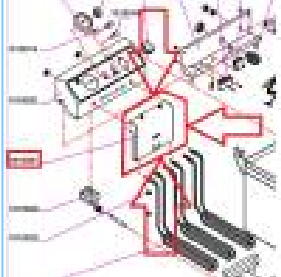 


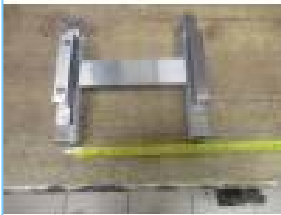 




- i Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	<b>19000067</b>	<ul style="list-style-type: none"> <li> Zawór spustowy</li> <li> Drain valve</li> </ul>	<span style="color: green;">●</span> <b>1</b>
	<b>19000107</b>	<ul style="list-style-type: none"> <li> Dioda pomarańczowa</li> <li> Orange Indication Light</li> </ul>	<span style="color: green;">●</span> <b>37</b>
	<b>19000108</b>	<ul style="list-style-type: none"> <li> Dioda zielona</li> <li> Green Indication Light</li> </ul>	<span style="color: green;">●</span> <b>1</b>
	<b>19000135</b>	<ul style="list-style-type: none"> <li> Fryer Temperature Knob</li> <li> Pokrętko temperatury – nowy typ</li> </ul>	<span style="color: green;">●</span> <b>80</b>
	<b>19000266</b>	<ul style="list-style-type: none"> <li> Głowica 400V</li> <li> Heating head 400V</li> </ul>	<span style="color: red;">●</span> <b>0</b>

Product image	SKU number	Product name	Available quantity
	<b>19000888</b>	<p>GAŁKI OD ZAWORU SPUSTOWEGO</p> <p>KNOB TO DRAIN VALVE</p> <p>Knob für Entleerungshahn</p>	● 10
	<b>19002560</b>	<p>OPAKOWANIE ZEWNĘTRZNE 75x59x42</p> <p>Outer Packaging 75x59x42</p> <p>Außenverpackung 75x59x42</p>	● 0
	<b>19003159</b>	<p>POKRYWA</p> <p>Deckel</p> <p>cover RCSF-16ETH RCSF-16DTH</p>	● 15
	<b>19009462</b>	<p>Termostat</p> <p>Thermostat</p>	● 307
	<b>19021174</b>	<p>Bezpiecznik termiczny</p> <p>Thermal fuse</p>	● 6
	<b>19023317</b>	<p>Koszyk</p> <p>Basket</p>	● 21

Product image	SKU number	Product name	Available quantity
	<b>19025267</b>	<ul style="list-style-type: none"> <li> Zbiornik dwukomorowy</li> <li> Fryer body</li> </ul>	<ul style="list-style-type: none"> <li><span style="color: red;">●</span> <b>0</b></li> </ul>
	<b>19028153</b>	<ul style="list-style-type: none"> <li> Plastikowy przycisk RESET</li> <li> Plastic RESET button</li> </ul>	<ul style="list-style-type: none"> <li><span style="color: green;">●</span> <b>5</b></li> </ul>
	<b>19029303</b>	<ul style="list-style-type: none"> <li> Uchwyt koszyka z mocowaniem do frytkownicy elektrycznej</li> <li> Basket holder with mounting for electric fryer</li> </ul>	<ul style="list-style-type: none"> <li><span style="color: green;">●</span> <b>2</b></li> </ul>
	<b>19029753</b>	<ul style="list-style-type: none"> <li> Wspornik grzałek kompletny do frytownicy</li> <li> Complete heater bracket for fryer</li> </ul>	<ul style="list-style-type: none"> <li><span style="color: red;">●</span> <b>0</b></li> </ul>