

- i Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	19000104	<ul style="list-style-type: none"> <li> RCES-580 Heating Element</li> <li> Heizspirale</li> <li> grzałka</li> </ul>	● 4
	19000111	<ul style="list-style-type: none"> <li> Termostat regulowany 300C 250V 16A</li> <li> adjustable thermostat 300C 250V 16A</li> <li> regulierbarer Thermostat 300C 250V 16A</li> </ul>	● 0
	19000130	<ul style="list-style-type: none"> <li> Naklejka panelu</li> <li> Sticker Silver PVC</li> </ul>	● 0
	19000135	<ul style="list-style-type: none"> <li> Fryer Temperature Knob</li> <li> Pokrętko temperatury - nowy typ</li> </ul>	● 80
	19000136	<ul style="list-style-type: none"> <li> POKRĘTKO TIMERA</li> <li> TIMER-KNOB</li> <li> TIMER KNOB</li> </ul>	● 103
	19000140	<ul style="list-style-type: none"> <li> Thermo-bezpiecznik 350° WQS-350B</li> <li> Thermo-fuse 350 ° WQS-350B</li> </ul>	● 3
	19000788	<ul style="list-style-type: none"> <li> RĄCZKA</li> <li> GRIF</li> <li> HANDLE RCES-580H</li> </ul>	● 8
	19000876	<ul style="list-style-type: none"> <li> TARCZA 15"</li> <li> SAW 15"</li> <li> Schild 15"</li> </ul>	● 0
	19000879	TIMER 15"	● 0
	19002335	<ul style="list-style-type: none"> <li> TERMOSTAT 300C Z POKRĘTKIEM</li> <li> BAZA</li> <li> thermostat 300C with knob</li> </ul>	● 3
	19002357	<ul style="list-style-type: none"> <li> Dioda zielona</li> <li> green indicator RCNK-4,RCNK-6,RCNK-4-GN,RCWM-1500-S,RCWS-30,RCWS-60,RCWM-1300-R,RCWM-2600-R,RCWM-2000-E,RCKG-2200-G,RCKG-2200,RCKG-3600-G,RCWM-1500-H,RCWM-4000-E,RCEC-3000-R,RCEG-55,RCEG-75,RCEC-3000-E,RCEC-6000-E,RCEF-10EY-ECO,RCEF-10DY-</li> </ul>	● 45
	19002576	<ul style="list-style-type: none"> <li> OPAKOWANIE ZEWNĘTRZNE 64x49x43</li> <li> Outer Packaging 64x49x43</li> <li> Außenverpackung 64x49x43</li> </ul>	● 0
	19003049	<ul style="list-style-type: none"> <li> TIMER 15 MIN.</li> <li> Timer 15 Minuten</li> </ul>	● 0
	19003210	<ul style="list-style-type: none"> <li> RUSZT</li> <li> grate</li> <li> Rost RCES 580H</li> </ul>	● 0
	19003498	<ul style="list-style-type: none"> <li> TACKA</li> <li> TRAY</li> <li> TABLETT RCES 580H</li> </ul>	● 0
	19008217	<ul style="list-style-type: none"> <li> Opakowanie zastępcze 60x60x50</li> <li> substitute packaging 60x60x50</li> </ul>	● 165
	19008335	<ul style="list-style-type: none"> <li> Obudowa metalowa</li> <li> Metal housing</li> </ul>	● 5
	19023034	<ul style="list-style-type: none"> <li> Pokrętko timera (STARY TYP)</li> <li> Timer knob (OLD TYPE)</li> </ul>	● 6