


 









 

 




- i** Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i** The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	1900111	<ul style="list-style-type: none"> Termostat regulowany 300C 250V 16A adjustable thermostat 300C 250V 16A regulierbarer Thermostat 300C 250V 16A 	0
	19002335	<ul style="list-style-type: none"> TERMOSTAT 300C Z POKRĘTLEM BAZA thermostat 300C with knob 	4
	19002348	<ul style="list-style-type: none"> GRZĄŁKA GÓRNA upper heating element das obere Heizelement RCWM-1500-H 	0
	19002349	<ul style="list-style-type: none"> GRZĄŁKA DOLNA underneath heating element das untere Heizelement RCWM-1500-H 	0
	19002357	<ul style="list-style-type: none"> Dioda zielona green indicator RCNK-4,RCNK-6,RCNK-4-GN,RCWM-1500-S,RCWS-30,RCWS-60,RCWM-1300-R,RCWM-2600-R,RCWM-2000-E,RCKG-2200-G,RCKG-2200-G,RCKG-3600-G,RCWM-1500-H,RCWM-4000-E,RCEC-3000-R,RCEG-55,RCEG-75,RCEC-3000-E,RCEC-6000-E,RCEF-10EY-ECO, RCEF-10DY- 	50
	19002358	<ul style="list-style-type: none"> DIODA POMARAŃCZOWA orange indicator RCNK-4,RCNK-6,RCNK-4-GN,RCWM-1500-S,RCWS-30,RCWS-60,RCWM-1300-R,RCWM-2600-R,RCWM-2000-E,RCKG-2200-G,RCKG-2200-G,RCKG-3600-G,RCWM-1500-H,RCWM-4000-E,RCEC-3000-R,RCEG-55,RCEG-75,RCEC-3000-E,RCEC-6000-E,RCEF-10EY-ECO, RCEF 	40
	19002359	<ul style="list-style-type: none"> TIMER 15 MIN. Z POKRĘTLEM BAZA 15 mins timer with knob 	3
	19002627	<ul style="list-style-type: none"> OPAKOWANIE ZEWNĘTRZNE 46x36x29 Outer Packaging 46x36x29 Außenverpackung 46x36x29 	0
	19002798	<ul style="list-style-type: none"> Płyta robocza górna Worktop Top Obere Heizplatte RCWM-1500-H 	0
	19002799	<ul style="list-style-type: none"> Płyta robocza dolna Worktop Bottom Untere Heizplatte RCWM-1500-H 	0
	19003048	<ul style="list-style-type: none"> POKRĘTŁO TIMERA Timer-Knob 	8
	19003049	<ul style="list-style-type: none"> TIMER 15 MIN. Timer 15 Minuten 	0
	19003694	<ul style="list-style-type: none"> TERMOSTAT THERMOSTAT THERMOSTAT RCKG-3600-G 	17
	19004162	<ul style="list-style-type: none"> DOLNA PLYTA OBUDOWY Untere Gehäuseplatte Bottom housing plate RCWM-1500-H 	0
	19004967	<ul style="list-style-type: none"> PLYTY ROBOCZE DÓŁ I GÓRA Arbeitsplatten untere + obere lower + upper working plates RCWM-1500-H 	0
	19009806	<ul style="list-style-type: none"> Uchwyt Handle 	6
	19010260	<ul style="list-style-type: none"> Obudowa górna Top cover with handle and handle fixer 	16
	19016292	<ul style="list-style-type: none"> Naklejka Front Sticker 	1