







- i Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	10010223	<ul style="list-style-type: none">  ZESTAW ŁYŻKA+KUBEK  shovel+cup  Löffel+Becher 	● 0
	19000062	<ul style="list-style-type: none">  Włącznik 4 pin - nowy typ (większy)  Power Switch 4 pins- new type (bigger size) 	● 204
	19000153	<ul style="list-style-type: none">  Grzałka 1000W  Heater 1000 W 	● -1
	19000206	<ul style="list-style-type: none">  Garnek wtyczka 3 PIN żeńska (STARY TYP)  Pot 3 PIN female plug (OLD TYPE) 	● -31
	19000207	<ul style="list-style-type: none">  TERMOSTAT 230C RCPS  RCPR  RCPW-16E 	● 64

Product image	SKU number	Product name	Available quantity
	19000398	<p>🇵🇱 MIESZADŁO</p> <p>🇬🇧 Popcorn Stirrer</p> <p>🇩🇪 Rührstab for RCPS-16E, RCPR-16E,RCPW-16E</p>	● 0
	19000604	<p>🇵🇱 Żarówka E27 60W</p> <p>🇬🇧 Bulb E27 60W</p>	● 18
	19001291	<p>🇵🇱 Szyba tylna 45x53 cm</p> <p>🇬🇧 Back glass 45x53 cm (for S04)</p>	● 8
	19001292	<p>🇵🇱 Szyba boczna 31x53 cm</p> <p>🇬🇧 Side glass 31x53 cm (for S04)</p>	● 0
	19001712	<p>🇵🇱 RĄCZKA DO POKRYWY GÁRNKA</p> <p>🇬🇧 Griff für Topfdeckel</p> <p>🇩🇪 handle for pot cover RCPS-16E</p>	● 4
	19002235	<p>🇵🇱 DRZWI SZKLANE LEWE</p> <p>🇬🇧 Glastür links</p> <p>🇩🇪 glass door left RCPR-16E</p>	● 30

Product image	SKU number	Product name	Available quantity
	19002236	<p>🇵🇱 DRZWI SZKLANE PRAWIE</p> <p>🇬🇧 Glastür</p> <p>🇩🇪 glass door right RCPR-16E</p>	● 0
	19002683	<p>🇵🇱 Szuflada 20x17 cm</p> <p>🇬🇧 Drawer 20x17 cm (for S04)</p>	● 0
	19002800	<p>🇵🇱 Górna część maszyny</p> <p>🇬🇧 The Upper Part of the Machine</p> <p>🇩🇪 Oberer Teil des Gerätes RCPR-16E</p>	● 9
	19002884	<p>🇵🇱 DRZWICZKI BEZ RĄCZKI I ZAWIASÓW</p> <p>🇬🇧 TÜR OHNE GRIFF UND SCHARNIER</p> <p>🇩🇪 DOOR WITHOUT HANDLE AND HINGE RCPW-16E; RCPR-16E; RCPS-16E</p>	● 100
	19003531	<p>🇵🇱 DASZEK</p> <p>🇬🇧 Dach</p> <p>🇩🇪 roof RCPW-16.3</p>	● 1
	19005099	<p>🇵🇱 OPAKOWANIE ZEWNĘTRZNE 62x48x82</p> <p>🇬🇧 Externe Verpackung 62x48x82</p> <p>🇩🇪 Outer packbox 62x48x82</p>	● 0

Product image	SKU number	Product name	Available quantity
	19005458	<ul style="list-style-type: none">  LISTWA Z PRZEŁĄCZNIKAMI  Leiste mit Umschaltern  batten with change-over switches RCPR-16.3 	● 0
	19008231	<ul style="list-style-type: none">  Opakowanie zastępcze 60x60x80  substitute packaging 60x60x80 	● 153
	19008798	<ul style="list-style-type: none">  Naklejka z opisem  Sticker with description 	● 4
	19017390	<ul style="list-style-type: none">  Drzwi szklane 36.5x21.5 cm [NOWY TYP]  Glass door 36.5x21.5 cm [NEW TYPE] (for S04) 	● 53
	19029166	<ul style="list-style-type: none">  Gniazdo 3 PIN zasilania garnka - żeńskie  Gniazdo 3 PIN zasilania garnka - żeńskie 	● 64
	19029167	<ul style="list-style-type: none">  Wtyczka 3 PIN zasilania garnka - męska  3-PIN Plug for pot power-male 	● 68

Product image	SKU number	Product name	Available quantity
	19029168	<p>🇵🇱 Gniazdo 3 PIN zasilania garnka - męskie</p> <p>🇬🇧 3-PIN Socket for pot power - male</p>	● 46
	19029169	<p>🇵🇱 Wtyczka 3 PIN zasilania garnka - żeńska</p> <p>🇬🇧 3-PIN Plug for pot power - female</p>	● 45