
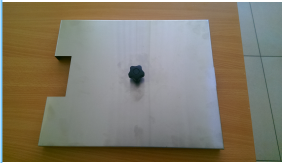





- i Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	10010129	<ul style="list-style-type: none"> i Kosz frytkownicy + uchwyt i Fryer Basket + handle i Korb + Griff 	● 0
	19000110	<ul style="list-style-type: none"> i Termostat WYE-190-0010 190C" i Thermostat WYE-190-0010 190C" 	● 149
	19000563	<ul style="list-style-type: none"> i BOWL FOR RCTF-10EH, RCTF-10DH i miska 	● 0
	19000597	<ul style="list-style-type: none"> i KOSZYK i KORB i BASKET 	● 28
	19000895	<ul style="list-style-type: none"> i GRZAŁKA RCTF 10EH i DH i HEATING ELEMENT 	● -2

Product image	SKU number	Product name	Available quantity
 GASTROPARTS	19001752	<p>Przełącznik zielony 4-pin</p> <p>green switch 4-pin</p> <p>grüner Umschalter 4-pin</p>	● 47
	19002435	<p>POKRYWA</p> <p>COVER</p> <p>DECKEL RCTF-10DH</p>	● 4
	19007833	<p>Opakowanie zewnętrzne 64x51x35</p> <p>outer packaging 64x51x35</p>	● 0
	19009281	<p>Termobezpiecznik</p> <p>Thermal fuse</p>	● 12
	19014713	<p>Głowica grzewcza [Nowy typ]</p> <p>Heating head [New type]</p>	● 0