
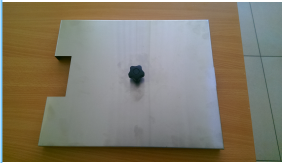





- i** Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i** The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	10010129	<ul style="list-style-type: none">  Kosz frytkownicy + uchwyt  Fryer Basket + handle  Korb + Griff 	● 227
	19000110	<ul style="list-style-type: none">  Termostat WYE-190-0010 190C"  Thermostat WYE-190-0010 190C" 	● 116
	19000563	<ul style="list-style-type: none">  BOWL FOR RCTF-10EH, RCTF-10DH  miska 	● 0
	19000597	<ul style="list-style-type: none">  KOSZYK  KORB  BASKET 	● 28
	19000895	<ul style="list-style-type: none">  GRZAŁKA RCTF 10EH  DH  HEATING ELEMENT 	● -2

Product image	SKU number	Product name	Available quantity
 <p>GASTROPARTS</p>	19001752	<p>Przełącznik zielony 4-pin</p> <p>green switch 4-pin</p> <p>grüner Umschalter 4-pin</p>	● 37
	19002435	<p>POKRYWA</p> <p>COVER</p> <p>DECKEL RCTF-10DH</p>	● 4
	19007833	<p>Opakowanie zewnętrzne 64x51x35</p> <p>outer packaging 64x51x35</p>	● 0
	19009281	<p>Termobezpiecznik</p> <p>Thermal fuse</p>	● 8
	19014713	<p>Głowica grzewcza [Nowy typ]</p> <p>Heating head [New type]</p>	● 0