













- i Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	19012419	<ul style="list-style-type: none">  Płyta ceramiczna 40x36 [cm]  Ceramic plate 40x36 [cm] 	● 12
	19013429	<ul style="list-style-type: none">  Osłona żarówki  Glass housing of the bulb 	● 4
	19014578	<ul style="list-style-type: none">  Pokrętło plastikowe  Plastic knob 	● 2
	19014582	<ul style="list-style-type: none">  Timer  Timer 	● 14
	19014584	<ul style="list-style-type: none">  Pokrętło  Knob 	● 7

Product image	SKU number	Product name	Available quantity
	19014588	 Termostat 320 C  Thermostat 320 C	 7
	19014590	 Włącznik kołyskowy  Rocker switch	 1
	19019654	 Szyba drzwiczek  Door glass	 0