














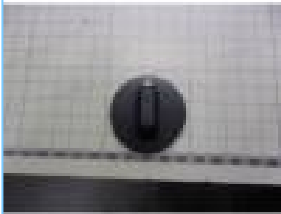

- i Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	19014578	<ul style="list-style-type: none">  Pokrętko plastikowe  Plastic knob 	● 2
	19014582	<ul style="list-style-type: none">  Timer  Timer 	● 14
	19014584	<ul style="list-style-type: none">  Pokrętko  Knob 	● 7
	19014588	<ul style="list-style-type: none">  Termostat 320 C  Thermostat 320 C 	● 7
	19020234	<ul style="list-style-type: none">  Kamień do pizzy  Pizza stone 	● 0