 


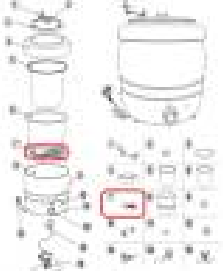 










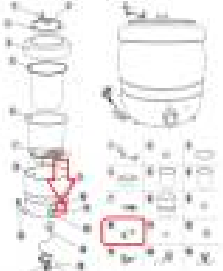


- i** Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i** The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	19013104	<p> Taśma grzewcza</p> <p> Heating tape</p>	● 0
	19013105	<p> Lampa sygnalizacyjna mocy</p> <p> Power indicator lamp</p>	● 0
	19013106	<p> Pokrętło</p> <p> Knob</p>	● 5
	19013107	<p> Termostat</p> <p> Thermostat</p>	● 3
	19023633	<p> Wnętrze garnka 10L</p> <p> 10L pot interior</p>	● 1