








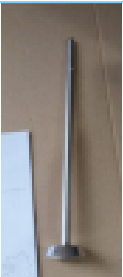




- i Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	19023962	<ul style="list-style-type: none"> i  Plastikowa osłona  Plastic cover 	● 0
	19029637	<ul style="list-style-type: none"> i  Dolna plastikowa obudowa  Lower plastic housing 	● 0
	19029950	<ul style="list-style-type: none"> i  Pokrywa z uchwytem do zaparzacza do kawy  Cover with a handle for a coffee urn 	● 0
	19030257	<ul style="list-style-type: none"> i  Rurka wznosząca perkolatora  Percolator ascending tube 	● 0