





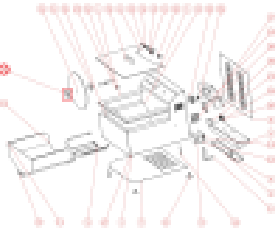


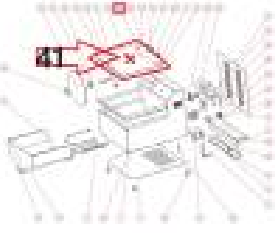




- i** Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i** The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	19016986	<p> Grzałka</p> <p> Heater</p>	● 0
	19016987	<p> Wyłącznik termiczny z wyłącznikiem silnika</p> <p> Thermal breaker with motor circuit breaker</p>	● 0
	19016988	<p> Przycisk - RESET</p> <p> RESET button</p>	● 1
	19025795	<p> Grzałka 220V~ 50Hz 800W [NOWY TYP]</p> <p> Heating element 220V~ 50Hz 800W [NEW TYPE]</p>	● 10
	19027634	<p> Filtr EMI VIP4-1A-03 do temperówki do czekolady</p> <p> EMI Filter VIP4-1A-03 for Chocolate Sharpener</p>	● 0

Product image	SKU number	Product name	Available quantity
	19029658	<ul style="list-style-type: none">  Elektroniczny regulator temperatury  Electronic temperature controller 	<ul style="list-style-type: none"> ● 0
	19029972	<ul style="list-style-type: none">  Plastikowe pokrętko prędkości silnika  Motor speed plastic knob 	<ul style="list-style-type: none"> ● 0
	19029973	<ul style="list-style-type: none">  Metalowy dysk mocujący  Metal mounting disc 	<ul style="list-style-type: none"> ● 0
	19030316	<ul style="list-style-type: none">  Pokrywa plastikowa  Plastic lid 	<ul style="list-style-type: none"> ● 0