


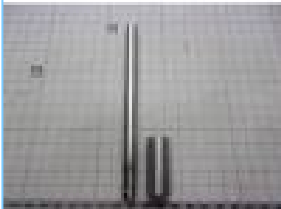













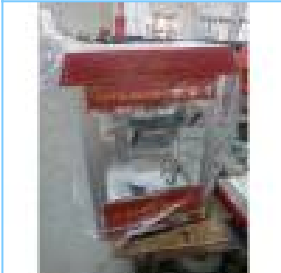

- i Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	19002032	<ul style="list-style-type: none">  ELEMENT MIESZADŁA  Teil vom Rührarm  stirrer element RCPS-16E 	● 39
	19003672	<ul style="list-style-type: none">  PRZEKAŹNIK  RELAIS  RELAY RCPC-16E 	● 9
	19014304	<ul style="list-style-type: none">  Elementy mieszadła  Agitator elements 	● 46
	19025099	<ul style="list-style-type: none">  Noga  Leg 	● 0
	19025308	<ul style="list-style-type: none">  BOX 1 Kompletny  BOX 1 Complete 	● 0

Product image	SKU number	Product name	Available quantity
	19025585	 Box 2 kompletny  Box 2 complete	● 2
	19027074	 Garnek - wtyczka 5 PIN  Pot - 5 PIN plug	● 1