






















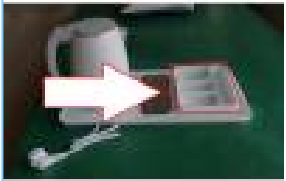





- i** Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i** The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	19018376	<ul style="list-style-type: none">  Mechanizm zamykania pokrywy  Lid closing mechanism 	● 1
	19018377	<ul style="list-style-type: none">  Pokrywa  Kettle lid 	● 4
	19018378	<ul style="list-style-type: none">  Przycisk pokrywy  Lid button 	● 1
	19018379	<ul style="list-style-type: none">  Podstawa pokrywy  Bottom of the lid 	● 1
	19018380	<ul style="list-style-type: none">  Przycisk otwierania  Open button 	● 1

Product image	SKU number	Product name	Available quantity
	19018381	 Osłona uchwytu  Handle cover	 1
	19018382	 Podstawa czajnika  Kettle seat	 1
	19024181	 Wyjmowana tacka [1]  Removable tray [1]	 14