











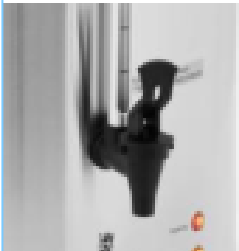




- i Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	19024471	<ul style="list-style-type: none">  Termostat KSD307 160 st. - wkręcany  Thermostat KSD307 160 deg. - screwed 	● 5
	19025236	<ul style="list-style-type: none">  Pokrywka  Lid 	● 6
	19028500	<ul style="list-style-type: none">  Uchwyt plastikowy  Plastic handle 	● 0
	19029544	<ul style="list-style-type: none">  Sitko do zaparzacza kawy  Strainer for coffe maker 	● 0
	19029615	<ul style="list-style-type: none">  Kran  Tap 	● 0