




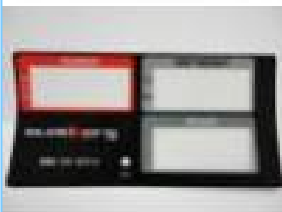


- i Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	19000354	<ul style="list-style-type: none">  NEW MODULE FOR SBS-ZW-3001H  Hauptplatine neu części zapasowe do wag 	● 0
	19000415	<ul style="list-style-type: none">  DISPLAY BOARD FOR SBS-ZW-3001H  MoDUŁ WYŚWIETLACZA  Displaymodul 	● 17
	19000416	<ul style="list-style-type: none">  KEYBOARD FOR SBS-ZW-3001H  klawiatuta  Tastatur 	● 0
	19000441	<ul style="list-style-type: none">  BATTERY COVER (NEW) FOR SBS-ZW-3001  POKRYWA BATERII 	● 16
	19000523	<ul style="list-style-type: none">  Szalka plastikowa  plastic pan  Schale aus Plastik 	● 36

Product image	SKU number	Product name	Available quantity
	19000575	<p>🇵🇱 RUBBER PAD</p> <p>🇬🇧 Gummibeleg für Schale FOR PAN SBS-PW-301C</p> <p>🇩🇪 części zapasowe do wag</p>	● 0
	19000997	<p>🇵🇱 AKUMULATOR 6V4AH</p> <p>🇬🇧 BATTERY</p> <p>🇩🇪 Akku</p>	● 1
	19001018	<p>🇵🇱 SENSOR SENSOR SBS-ZW-3001H</p> <p>🇬🇧 SENSOR SENSOR SBS-ZW-3001H</p>	● 18
	19001304	<p>🇵🇱 OBUDOWA GÓRNA</p> <p>🇬🇧 upper housing</p> <p>🇩🇪 Obergehäuse for SBS-ZW-3001H</p>	● 8
	19001305	<p>🇵🇱 OBUDOWA DOLNA</p> <p>🇬🇧 lower housing</p> <p>🇩🇪 Niedergehäuse for SBS-ZW-3001H</p>	● 19
	19001306	<p>🇵🇱 Pokrywa szalki metalowa</p> <p>🇬🇧 covers the metal pan</p> <p>🇩🇪 Metalldeckel für die Wiegeplatte</p>	● 25

Product image	SKU number	Product name	Available quantity
	19001336	<p>🇵🇱 ZASILACZ 9V300MA</p> <p>🇬🇧 Adapter</p> <p>🇩🇪 Netzteil</p>	● 0
	19001337	<p>🇵🇱 NÓŻKA DO SBS-ZW-3001H</p> <p>🇬🇧 Foot</p> <p>🇩🇪 Fuss</p>	● 15
	19001380	<p>🇵🇱 LIBELLA</p> <p>🇬🇧 WASSERWAAGE</p> <p>🇩🇪 LEVEL</p>	● 215
	19001686	<p>🇵🇱 RAMA SZALKI</p> <p>🇬🇧 frame pan</p> <p>🇩🇪 Rahmen für die Wiegeplatte DO SBS-ZW-3001H</p>	● 11
	19001730	<p>🇵🇱 AKUMULATOR 6V4AH</p> <p>🇬🇧 Akku</p> <p>🇩🇪 battery PRODUCENT</p>	● 0
	19001740	<p>🇵🇱 PANEL PRZEDNI</p> <p>🇬🇧 Vorderpanel</p> <p>🇩🇪 Frontpanel DO SBS-ZW-3001H</p>	● 6

Product image	SKU number	Product name	Available quantity
	19001741	<ul style="list-style-type: none">  PANEL KLAWIATURY  Tastaturpanel  Keyboard panel SBS-ZW-3001H 	● 0
	19003086	<ul style="list-style-type: none">  POKRYWA BATERII NA 3 ŚRUBY  Batteriefachdeckel für 3Schrauben  battery cover for 3 screws SBS-ZW-3001H 	● 12
	19006929	<ul style="list-style-type: none">  Opakowanie zewnętrzne 31,5x37,5x14,5  outside packaging 31,5x37,5x14,5  Außenverpackung 31,5x37,5x14,5 	● 0
	19008206	<ul style="list-style-type: none">  Opakowanie zastępcze 40x40x20  substitute packaging 40x40x20 	● 153
	19011128	<ul style="list-style-type: none">  Uszczelka gumowa  Rubber gasket 	● 33
	19024779	<ul style="list-style-type: none">  Plastikowa osłonka  Plastic cover 	● 0

Product image	SKU number	Product name	Available quantity
	19027155	<p>  Włącznik  On  off switch </p>	<p>● 6</p>
	19028045	<p>  Plastikowa nóżka szalki  Plastic pan foot </p>	<p>● 0</p>