

- i Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	<b>19000354</b>	<ul style="list-style-type: none"> <li> NEW MODULE FOR SBS-ZW-3001H</li> <li> Hauptplatine neu części zapasowe do wag</li> </ul>	<span style="color: red;">●</span> <b>0</b>
	<b>19000415</b>	<ul style="list-style-type: none"> <li> DISPLAY BOARD FOR SBS-ZW-3001H</li> <li> MoDUŁ WYŚWIETLACZA</li> <li> Displaymodul</li> </ul>	<span style="color: green;">●</span> <b>14</b>
	<b>19000416</b>	<ul style="list-style-type: none"> <li> KEYBOARD FOR SBS-ZW-3001H</li> <li> klawiatuta</li> <li> Tastatur</li> </ul>	<span style="color: red;">●</span> <b>0</b>
	<b>19000441</b>	<ul style="list-style-type: none"> <li> BATTERY COVER (NEW) FOR SBS-ZW-3001</li> <li> POKRYWA BATERII</li> </ul>	<span style="color: green;">●</span> <b>16</b>
	<b>19000523</b>	<ul style="list-style-type: none"> <li> Szalka plastikowa</li> <li> plastic pan</li> <li> Schale aus Plastik</li> </ul>	<span style="color: green;">●</span> <b>35</b>

Product image	SKU number	Product name	Available quantity
	<b>19000575</b>	<p>🇵🇱 RUBBER PAD</p> <p>🇬🇧 Gummibeleg für Schale FOR PAN SBS-PW-301C</p> <p>🇩🇪 części zapasowe do wag</p>	● 0
	<b>19000997</b>	<p>🇵🇱 AKUMULATOR 6V4AH</p> <p>🇬🇧 BATTERY</p> <p>🇩🇪 Akku</p>	● 1
	<b>19001018</b>	<p>🇵🇱 SENSOR SENSOR SBS-ZW-3001H</p> <p>🇬🇧 SENSOR SENSOR SBS-ZW-3001H</p>	● 18
	<b>19001304</b>	<p>🇵🇱 OBUDOWA GÓRNA</p> <p>🇬🇧 upper housing</p> <p>🇩🇪 Obergehäuse for SBS-ZW-3001H</p>	● 8
	<b>19001305</b>	<p>🇵🇱 OBUDOWA DOLNA</p> <p>🇬🇧 lower housing</p> <p>🇩🇪 Niedergehäuse for SBS-ZW-3001H</p>	● 19
	<b>19001306</b>	<p>🇵🇱 Pokrywa szalki metalowa</p> <p>🇬🇧 covers the metal pan</p> <p>🇩🇪 Metalldeckel für die Wiegeplatte</p>	● 24

Product image	SKU number	Product name	Available quantity
	<b>19001336</b>	<p>🇵🇱 ZASILACZ 9V300MA</p> <p>🇬🇧 Adapter</p> <p>🇩🇪 Netzteil</p>	● 0
	<b>19001337</b>	<p>🇵🇱 NÓŻKA DO SBS-ZW-3001H</p> <p>🇬🇧 Foot</p> <p>🇩🇪 Fuss</p>	● 15
	<b>19001380</b>	<p>🇵🇱 LIBELLA</p> <p>🇬🇧 WASSERWAAGE</p> <p>🇩🇪 LEVEL</p>	● 215
	<b>19001686</b>	<p>🇵🇱 RAMA SZALKI</p> <p>🇬🇧 frame pan</p> <p>🇩🇪 Rahmen für die Wiegeplatte DO SBS-ZW-3001H</p>	● 11
	<b>19001730</b>	<p>🇵🇱 AKUMULATOR 6V4AH</p> <p>🇬🇧 Akku</p> <p>🇩🇪 battery PRODUCENT</p>	● 0
	<b>19001740</b>	<p>🇵🇱 PANEL PRZEDNI</p> <p>🇬🇧 Vorderpanel</p> <p>🇩🇪 Frontpanel DO SBS-ZW-3001H</p>	● 6

Product image	SKU number	Product name	Available quantity
	<b>19001741</b>	<ul style="list-style-type: none"> <li> PANEL KLAWIATURY</li> <li> Tastaturpanel</li> <li> Keyboard panel SBS-ZW-3001H</li> </ul>	● 0
	<b>19003086</b>	<ul style="list-style-type: none"> <li> POKRYWA BATERII NA 3 ŚRUBY</li> <li> Batteriefachdeckel für 3Schrauben</li> <li> battery cover for 3 screws SBS-ZW-3001H</li> </ul>	● 12
	<b>19006929</b>	<ul style="list-style-type: none"> <li> Opakowanie zewnętrzne 31,5x37,5x14,5</li> <li> outside packaging 31,5x37,5x14,5</li> <li> Außenverpackung 31,5x37,5x14,5</li> </ul>	● 0
	<b>19008206</b>	<ul style="list-style-type: none"> <li> Opakowanie zastępcze 40x40x20</li> <li> substitute packaging 40x40x20</li> </ul>	● 117
	<b>19011128</b>	<ul style="list-style-type: none"> <li> Uszczelka gumowa</li> <li> Rubber gasket</li> </ul>	● 33
	<b>19024779</b>	<ul style="list-style-type: none"> <li> Plastikowa osłonka</li> <li> Plastic cover</li> </ul>	● 0

Product image	SKU number	Product name	Available quantity
	<b>19027155</b>	<p>🇵🇱 Włącznik</p> <p>🇬🇧 On</p> <p>🇩🇪 off switch</p>	● <b>5</b>
	<b>19028045</b>	<p>🇵🇱 Gumowa uszczelka nóżki szalki</p> <p>🇬🇧 Rubber seal for the pan leg</p>	● <b>0</b>