

- i Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	19021494	🇵🇱 Wrzeciono 🇬🇧 Spindle	● 0
	19021495	🇵🇱 Uszczelka oleju 🇬🇧 Oil seal	● 1
	19021496	🇵🇱 Uszczelka oleju 🇬🇧 Oil seal	● 1
	19021497	🇵🇱 Przekładnia wału (I) 🇬🇧 I gear shaft	● 1
	19021498	🇵🇱 Tarcza sprzęgła 🇬🇧 Clutch disc	● 0

Product image	SKU number	Product name	Available quantity
	19021499	<p>🇵🇱 Przekładnia (I)</p> <p>🇬🇧 I gear</p>	● 1
	19021500	<p>🇵🇱 Przekładnia wału głównego</p> <p>🇬🇧 Mainshaft high speed gear</p>	● 1
	19021501	<p>🇵🇱 Przekładnia ślizgowa wału głównego</p> <p>🇬🇧 Mainshaft sliding gear</p>	● 1
	19021502	<p>🇵🇱 Wirnik</p> <p>🇬🇧 Rotor</p>	● 0
	19021503	<p>🇵🇱 Stojan</p> <p>🇬🇧 Stator</p>	● 0
	19021504	<p>🇵🇱 Osłona izolacyjna</p> <p>🇬🇧 Insulation shell</p>	● 0

Product image	SKU number	Product name	Available quantity
	19021505	 Szczotka węglowa  Carbon brush	● 4
	19021506	 Kontroler prędkości  Speeder controller	● 0
	19021727	 Przekładnia wału głównego  Mainshaft low speed gear	● 1
	19021728	O-ring	● 1
	19028849	 Włącznik  Switch	● 0