













- i** Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i** The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	19020232	 Podstawka do szalki  Scale stand	 3
	19020239	 Wyświetlacz LCD  LCD display	 8
	19024507	 Obudowa górna z klawiaturą  Upper housing with keyboard	 2