

- i Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	<b>19005152</b>	<ul style="list-style-type: none"> <li> ZASILACZ, WTYCZKA 3PIN, 7.8V</li> <li> 1.2A</li> <li> ADAPTER,plug 3PIN, 7.8V</li> </ul>	<span style="color: green;">●</span> <b>14</b>
	<b>19028065</b>	<ul style="list-style-type: none"> <li> Płyta PCB z wyświetlaczem Sch V1.0 Pcb V1.1</li> <li> PCB board with display Sch V1.0 Pcb V1.1</li> </ul>	<span style="color: red;">●</span> <b>0</b>
	<b>19029966</b>	<ul style="list-style-type: none"> <li> Głowica do wagi inwentarzowej</li> <li> Head for cattle scale</li> </ul>	<span style="color: green;">●</span> <b>1</b>
	<b>19029967</b>	<ul style="list-style-type: none"> <li> Wspornik głowicy wagi inwentarzowej</li> <li> Head bracket Head for cattle scale</li> </ul>	<span style="color: green;">●</span> <b>1</b>