














- i Please review all available spare parts for this item, then contact us through the webform (found in the Help Centre in our website header). Let us know the SKU of each spare part you're interested in and the quantity you need.
- i The availability of the products may change.

Product image	SKU number	Product name	Available quantity
	19005152	<ul style="list-style-type: none">  ZASILACZ, WTYCZKA 3PIN, 7.8V  1.2A  ADAPTER,plug 3PIN, 7.8V 	● 14
	19028065	<ul style="list-style-type: none">  Płyta PCB z wyświetlaczem Sch V1.0 Pcb V1.1  PCB board with display Sch V1.0 Pcb V1.1 	● 0
	19029966	<ul style="list-style-type: none">  Głowica do wagi inwentarzowej  Head for cattle scale 	● 1
	19029967	<ul style="list-style-type: none">  Wspornik głowicy wagi inwentarzowej  Head bracket Head for cattle scale 	● 1