

USER MANUAL

Bedienungsanleitung
Instrukcja obsługi
Návod k použití
Manuel d'utilisation
Istruzioni per l'uso
Manual de instrucciones
Használati útmutató
Brugsanvisning
Käyttöohje
Gebruiksaanwijzing
Bruksanvisning
Instruções de utilização
Používateľská príručka
Ръководство за употреба
Οδηγίες χρήσης
Upute za uporabu
Naudojimo instrukcija
Manual de utilizare
Navodila za uporabo

CONTACT HYGROMETER



DE	Produktname	Holzfeuchtemessgerät
EN	Product name	Contact hygrometer
PL	Nazwa produktu	Miernik wilgotności
CZ	Název výrobku	Kontaktní měřič vlhkosti
FR	Nom du produit	Détecteur d'humidité par contact
IT	Nome del prodotto	Misuratore di umidità a contatto
ES	Nombre del producto	Medidor de humedad por contacto
HU	Termék neve	Érintőes nedvességmérő
DA	Produktnavn	Kontaktfugtmåler
FI	Tuotteen nimi	Kosketuskosteusmittari
NL	Productnaam	Contactvochtmeter
NO	Produktnavn	Kontaktfuktmåler
SE	Produktnamn	Kontaktfuktmatåre
PT	Nome do produto	Medidor de humidade por contacto
SK	Názov produktu	Kontaktný vlhkomer
BG	Име на продукта	Контактен влагомер
EL	Όνομα προϊόντος	Μετρητής υγρασίας επαφής
HR	Naziv proizvoda	Kontaktni mjerač vlage
LT	Produktu pavadinimas	Kontaktinis drėgmės matuoklis
RO	Numele produsului	Măsurător de umiditate prin contact
SL	Ime izdelka	Kontaktni merilec vlage
DE Modell EN Product model PL Model produktu CZ Model výrobku FR Modèle IT Modello ES Modelo HU Modell DA Model FI Tuotteen malli NL Productmodel NO Produktmodell SE Produktmodell PT Modelo do produto SK Model BG Модел на продукт EL Μοντέλο προϊόντος HR Model proizvoda LT : Gaminio modelis RO : Model de produs SL : Model izdelka		SBS-DT-73
DE Hersteller EN Manufacturer PL Producent CZ Výrobce FR Fabricant IT Produttore ES Fabricante HU Termelő DA Producent FI Valmistaja NL Producent NO Produsent SE Tillverkare PT Fabricante SK Výrobca BG Производител EL Κατασκευαστής HR Proizvođač LT Gamintojas RO Producător SL Proizvajalec		expondo Polska sp. z o.o. sp. k.
DE Anschrift des Herstellers EN Manufacturer Address PL Adres producenta CZ Adresa výrobce FR Adresse du fabricant IT Indirizzo del produttore ES Dirección del fabricante HU A gyártó címe DA Producentens adresse FI Valmistajan osoite NL Adres producent NO Produsentens adresse SE Tillverkarens adress PT Endereço do fabricante SK Adresa výrobcu BG Адрес на производителя EL : Διεύθυνση κατασκευαστή HR Adresa proizvođača LT Gamintojo adresas RO Adresa producătorului SL Naslov proizvajalca		ul. Nowy Kisielin – Innowacyjna 7, 66-002 Zielona Góra Poland, EU



This User Manual has been translated using machine translation. We have made every effort to ensure the translation is accurate, but please note that automated translations are not perfect and are not meant to replace human translators. The official version of the User Manual is in English. Any differences between the translated version and the original English are not legally binding. If you have any questions about the accuracy of the translation, please refer to the English version, which is the official reference. More language versions are available upon request via info@expondo.com.

Technical data

Parameter description	Parameter value
Product name	Contact hygrometer
Model	SBS-DT-73
Input voltage	3*1.5V AAA
Dimensions [width x depth x height; mm]	32 x 143 x 22
Weight [kg]	0.7

1. General description

The user manual is designed to assist in the safe and trouble-free use of the device. The product is designed and manufactured in accordance with strict technical guidelines, using state-of-the-art technologies and components. Additionally, it is produced in compliance with the most stringent quality standards.

DO NOT USE THE DEVICE UNLESS YOU HAVE THOROUGHLY READ AND UNDERSTOOD THIS USER MANUAL.

To increase the product life of the device and to ensure trouble-free operation, use it in accordance with this user manual and regularly perform maintenance tasks. The technical data and specifications in this user manual are up to date. The manufacturer reserves the right to make changes associated with quality improvement. The device is designed to reduce noise emission risks to a minimum, taking into account technological progress and noise reduction opportunities.

Legend



The product satisfies the relevant safety standards.



Read instructions before use.



The product must be recycled.



WARNING! or **CAUTION!** or **REMEMBER!** Applicable to the given situation.

(general warning sign)



ATTENTION! Electric shock warning!



PLEASE NOTE! Drawings in this manual are for illustration purposes only and in some details may differ from the actual product.

2. Usage safety



ATTENTION! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury or even death.

The terms "device" or "product" are used in the warnings and instructions to refer to:

Contact hygrometer

2.1. Electrical safety

- a) Avoid touching earthed elements such as pipes, heaters, boilers and refrigerators. There is an increased risk of electric shock if the earthed device is exposed to rain, comes into direct contact with a wet surface or is operating in a damp environment. Water getting into the device increases the risk of damage to the device and of electric shock.
- b) Do not touch the device with wet or damp hands.
- c) To avoid electric shock, do not immerse the device in water or other liquids. Do not use the device on wet surfaces.
- d) **ATTENTION! DANGER TO LIFE!** While cleaning, never immerse the device in water or other liquids.
- e) Do not use in very humid environments or in the direct vicinity of water tanks.
- f) Prevent the device from getting wet. Risk of electric shock!

2.2. Safety in the workplace

- a) Make sure the workplace is clean and well lit. A messy or poorly lit workplace may lead to accidents. Try to think ahead, observe what is going on and use common sense when working with the device.
- b) Do not use the device in a potentially explosive environment, for example in the presence of flammable liquids, gases or dust. The device generates sparks which may ignite dust or fumes.
- c) If you discover damage or irregular operation, immediately switch the device off and report it to a supervisor without delay.
- d) If you are unsure about whether the device is operating correctly or if you find damage, please contact the manufacturer's service centre.
- e) Only the manufacturer's service centre may make repairs to the device. Do not attempt to make repairs yourself!
- f) In case of fire, use a powder or carbon dioxide (CO₂) fire extinguisher (one intended for use on live electrical devices) to put it out.
- g) Children or unauthorised persons are forbidden to enter a work station. A distraction may result in loss of control over the device.
- h) Use the device in a well-ventilated space.
- i) Regularly inspect the condition of the safety labels. If the labels are illegible, they must be replaced.
- j) Please keep this manual available for future reference. If this device is passed on to a third party, the manual must be passed on with it.
- k) Keep packaging elements and small assembly parts in a place not available to children.
- l) Keep the device away from children and animals.
- m) If this device is used together with another equipment, the remaining instructions for use shall also be followed.



Remember! When using the device, protect children and other bystanders.

2.3. Personal safety

- a) Do not use the device when tired, ill or under the influence of alcohol, narcotics or medication which can significantly impair the ability to operate the device.
- b) The device is not designed to be handled by persons (including children) with limited mental and sensory functions or persons lacking relevant experience and/or knowledge unless they are supervised by a person responsible for their safety or they have received instruction on how to operate the device.
- c) To prevent the device from accidentally switching on, make sure the switch is on the OFF position before connecting to a power source.
- d) The device is not a toy. Children must be supervised to ensure that they do not play with the device.

2.4. Safe device use

- a) Do not use the device if the “ON/OFF” switch does not function properly (does not switch the device on and off). Devices which cannot be switched on and off using the “ON/OFF” switch are hazardous, should not be operated and must be repaired.
- b) When not in use, store in a safe place, away from children and people not familiar with the device who have not read the user manual. The device may pose a hazard in the hands of inexperienced users.
- c) Keep the device in perfect technical condition. Before each use check for general damage, especially check moving components for cracked parts or elements, and for any other conditions which may impact the safe operation of the device. If damage is discovered, hand over the device for repair before use.
- d) Keep the device out of the reach of children.
- e) Device repair or maintenance should be carried out by qualified persons, only using original spare parts. This will ensure safe use.
- f) To ensure the operational integrity of the device, do not remove factory-fitted guards and do not loosen any screws.
- g) When transporting and handling the device between the warehouse and the destination, observe the occupational health and safety principles for manual transport operations which apply in the country where the device will be used.
- h) Clean the device regularly to prevent stubborn grime from accumulating.
- i) The device is not a toy. Cleaning and maintenance may not be carried out by children without supervision by an adult person.
- j) It is forbidden to interfere with the structure of the device in order to change its parameters or construction.
- k) Keep the device away from sources of fire and heat.




ATTENTION! Despite the safe design of the device and its protective features, and despite the use of additional elements protecting the operator, there is still a slight risk of accident or injury when using the device. Stay alert and use common sense when using the device.

3. Use guidelines

The product is designed to measure humidity levels in wood or building materials using the resistance principle. It transmits data to a smartphone via Bluetooth, allowing the measurement data to be displayed on the mobile app.

The user is liable for any damage resulting from unintended use of the device.

3.1. Device description

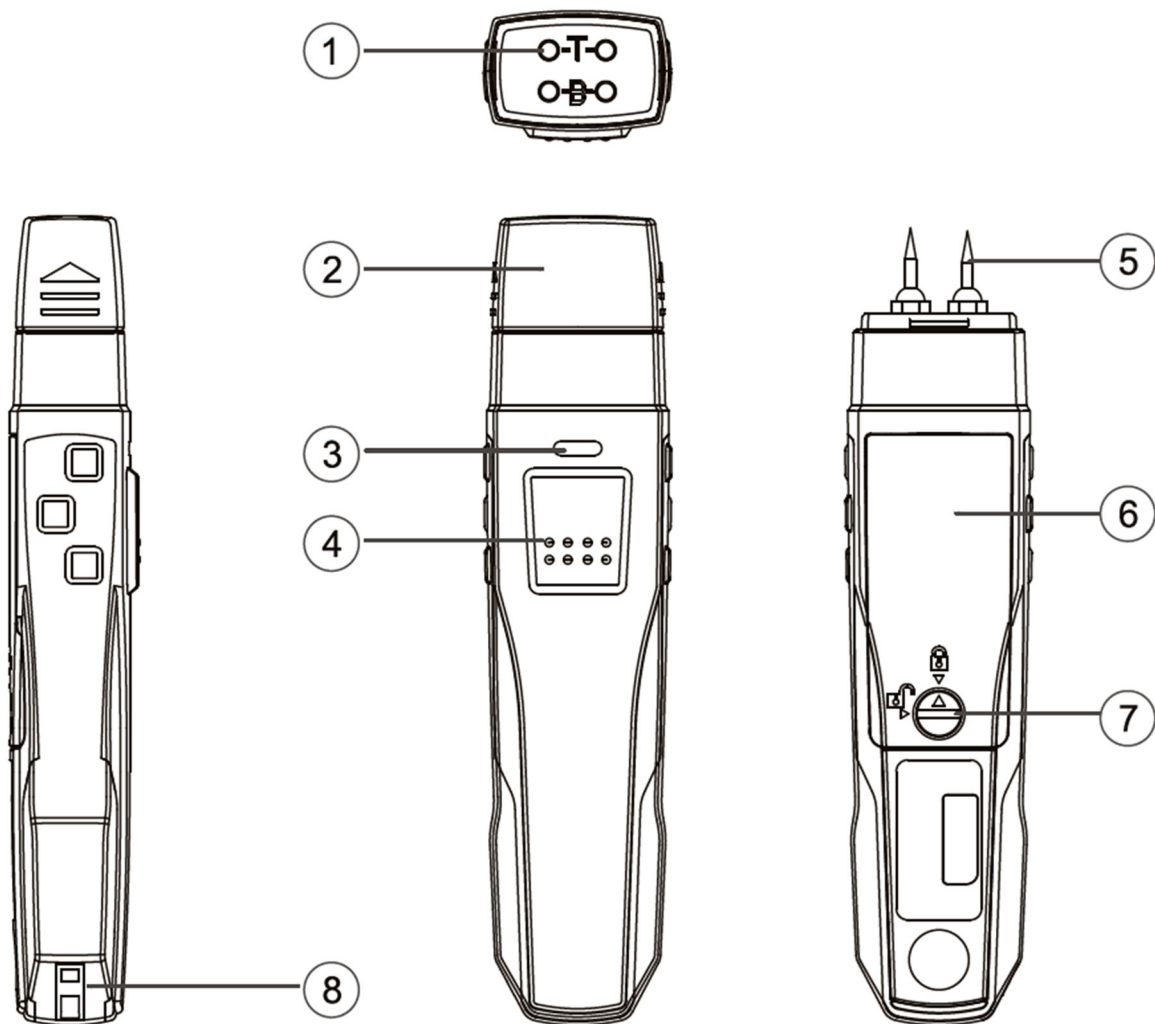

1. Self-detection point
2. Head cover
3. Indicator light
4. Key
5. Test probe
6. The battery cover
7. The battery cover knob
8. Hand buckle


3.2. Device use

OPERATION INSTRUCTIONS

This product features Bluetooth functionality and can be connected to an app to view measurement value.

Please download Meterbox Probes, available from the app stores. iOS users are recommended to use the AppStore; Android users are recommended to use Google Play.

The app currently supports only Chinese and English. Please refer to the built-in user manual within the app before use.

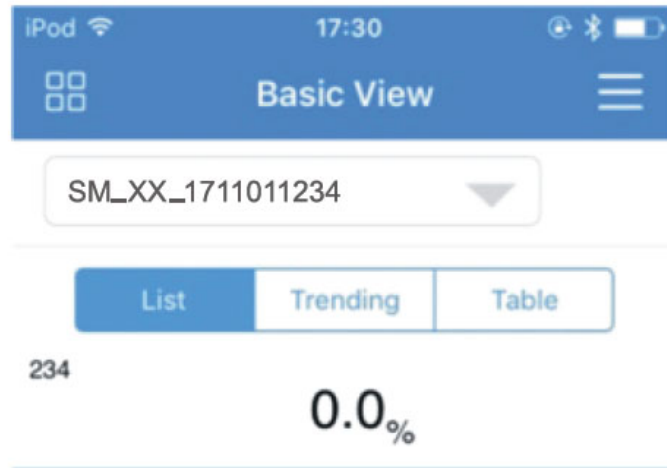

Short press the button to turn on the device, and long press the button to shut it down. Open the app, wait a few seconds, and the device will automatically connect to the app. Once connected, the mobile device interface will display the device name and the current measurement value in the list.



The screenshot shows the 'Device information' screen. At the top, the status bar indicates 'iPod', signal strength, Wi-Fi, time '17:05', and battery level. Below the status bar is a blue header with 'Back' on the left and 'Device information' in the center. The main content is a list of device details:

Instrument name	SM_XX_
Serial number	1711011234
Electricity	85%
Firmware version	v1.0
Sampling rate	1000(ms)
Part number	

Open the drop-down list of device names and click on the desired device name to display the device information, which includes the device name, serial number, battery power, and sampling rate.

AUTO-POWER-OFF (APO)

When the device is disconnected from the mobile device, the indicator light will turn yellow. If no button is pressed within 4 minutes, the device will automatically turn off.



NOTICE!

- When the battery level drops to 1% in the equipment information bar, please replace the battery promptly to avoid affecting the measurement and operation of the device.
- The test probe is very sharp. When not in use, always cover it with the protective head shield.

3.3. Cleaning and maintenance

- a) Use only non-corrosive cleaners to clean the surface.
- b) After cleaning the device, all parts should be dried completely before using it again.
- c) Store the unit in a dry, cool place, free from moisture and direct exposure to sunlight.
- d) Do not spray the device with a water jet or submerge it in water.
- e) The device must be regularly inspected to check its technical efficiency and spot any damage.
- f) Do not leave the battery in the device if it will not be used for a longer period of time.
- g) Use a soft, damp cloth for cleaning.
- h) Do not use sharp and/or metal objects for cleaning (e.g. a wire brush or a metal spatula) because they may damage the surface material of the appliance.
- i) Do not clean the device with an acidic substance, agents of medical purposes, thinners, fuel, oils or other chemical substances because it may damage the device.

SAFE REMOVAL OF BATTERIES AND RECHARGEABLE BATTERIES

Remove used batteries from the device using the same procedure by which you installed them.

Recycle batteries with the appropriate organisation or company.

UMWELT – UND ENTSORGUNGSHINWEISE

Hersteller an Verbraucher

Sehr geehrte Damen und Herren,

gebrauchte Elektro – und Elektronikgeräte dürfen gemäß europäischer Vorgaben **[1]** nicht zum unsortierten Siedlungsabfall gegeben werden, sondern müssen getrennt erfasst werden. Das Symbol der Abfalltonne auf Rädern weist auf die Notwendigkeit der getrennten Sammlung hin. Helfen auch Sie mit beim Umweltschutz. Sorgen Sie dafür, dieses Gerät, wenn Sie es nicht mehr weiter nutzen wollen, in die hierfür vorgesehenen Systeme der Getrenntsammlung zu geben.



In Deutschland sind Sie gesetzlich **[2]** verpflichtet, ein Altgerät einer vom unsortierten Siedlungsabfall getrennten Erfassung zuzuführen. Die öffentlich – rechtlichen Entsorgungsträger (Kommunen) haben hierzu Sammelstellen eingerichtet, an denen Altgeräte aus privaten Haushalten ihres Gebietes für Sie kostenfrei entgegengenommen werden. Möglicherweise holen die rechtlichen Entsorgungsträger die Altgeräte auch bei den privaten Haushalten ab.

Bitte informieren Sie sich über Ihren lokalen Abfallkalender oder bei Ihrer Stadt – oder Gemeindeverwaltung über die in Ihrem Gebiet zur Verfügung stehenden Möglichkeiten der Rückgabe oder Sammlung von Altgeräten.

- [1]** RICHTLINIE 2002/96/EG DES EUROPÄISCHEN PARLAMENTS UND DES RATES ÜBER ELEKTRO – UND ELEKTRONIK – ALTGERÄTE
- [2]** Gesetz über das Inverkehrbringen, die Rücknahme und die umweltverträgliche Entsorgung von Elektro – und Elektronikgeräten (Elektro – und Elektronikgerätegesetz – ElektroG).

Utylizacja produktu

Produkty elektryczne i elektroniczne po zakończeniu okresu eksploatacji wymagają segregacji i oddania ich do wyznaczonego punktu odbioru. Nie wolno wyrzucać produktów elektrycznych razem z odpadami gospodarstwa domowego. Zgodnie z dyrektywą WEEE 2012/19/UE obowiązującą w Unii Europejskiej, urządzenia elektryczne i elektroniczne wymagają segregacji i utylizacji w wyznaczonych miejscach. Dbając o prawidłową utylizację, przyczyniasz się do ochrony zasobów naturalnych i zmniejszasz negatywny wpływ oddziaływania na środowisko, człowieka i otoczenie. Zgodnie z krajowym prawodawstwem, nieprawidłowe usuwanie odpadów elektrycznych i elektronicznych może być karane!

For the disposal of the device please consider and act according to the national and local rules and regulations.

CONTACT

expondo Polska sp. z o.o. sp. k.

ul. Nowy Kisielin-Innowacyjna 7
66-002 Zielona Góra | Poland, EU

e-mail: info@expondo.com

